
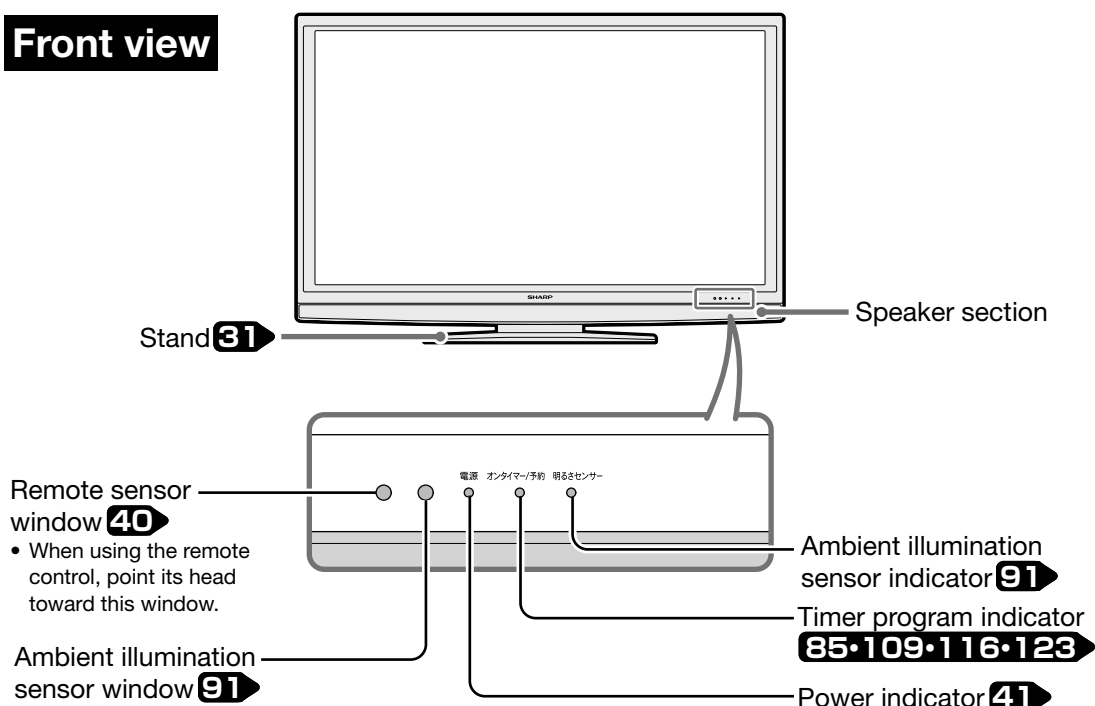


Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view



Adjusting the LCD panel angle **17**

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Control panel

Right side view


Main power switch **41**

Menu button **42**

Input / TV select (Enter) button **103**

Channel up (^) / down (v) buttons

Volume up (+) / down (-) buttons

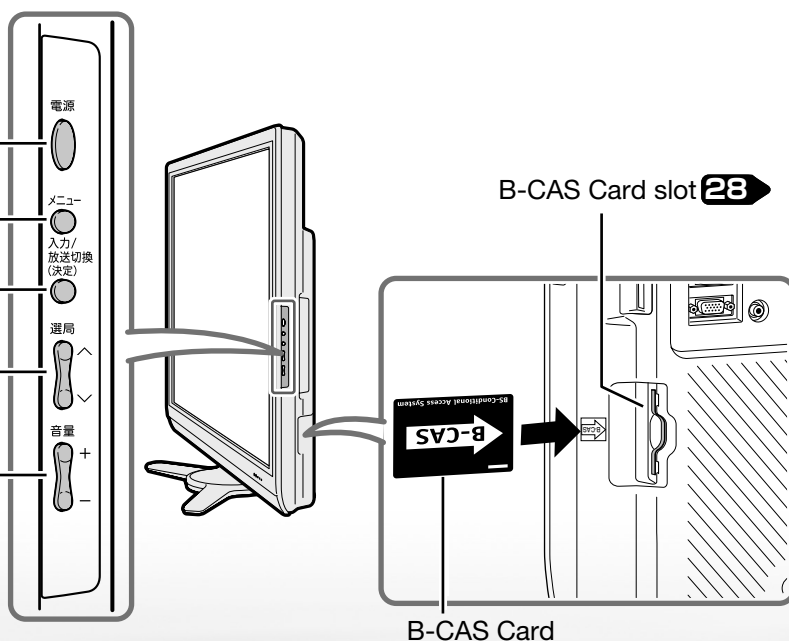

Back view

The illustrations below are those of LC-52AE6.

LC-46AE6 has almost the same layout of jacks and terminals as LC-52AE6.

LAN jack

(10BASE-T/100BASE-TX)

145

Connect the telephone line

Telephone line jack **145**

Connect a Blu-ray Disc player,
AV amplifier, etc.

AV in 1 and 2 (HDMI)

**36・101・102・
119・128・132**

AV in 6

101・112・128・131

AV in 4 **36・101・128**

RS-232C **140**

AV in 7 (PC) **133**

Digital audio
output jack
(optical) **119・130**

BS-CS 110 antenna
input terminal
32~35

VHF-UHF antenna
input terminal
32~35

PC input (audio)
132

AV in 3 (HDMI)





**36・101・102・
119・128・132**

AV in 5

36・101・128

Connect a video game
equipment,
video camera, etc.

Headphones jack

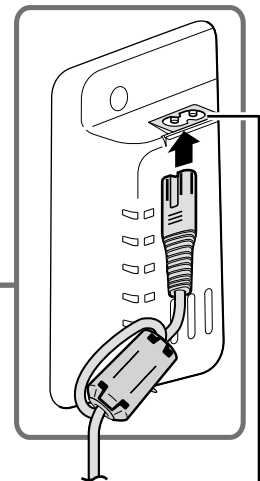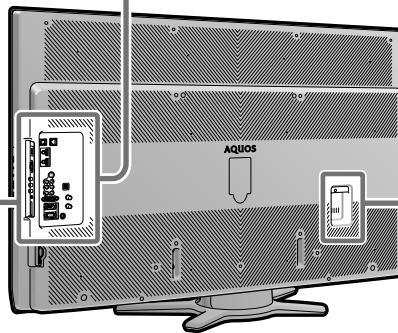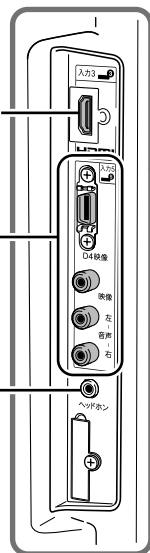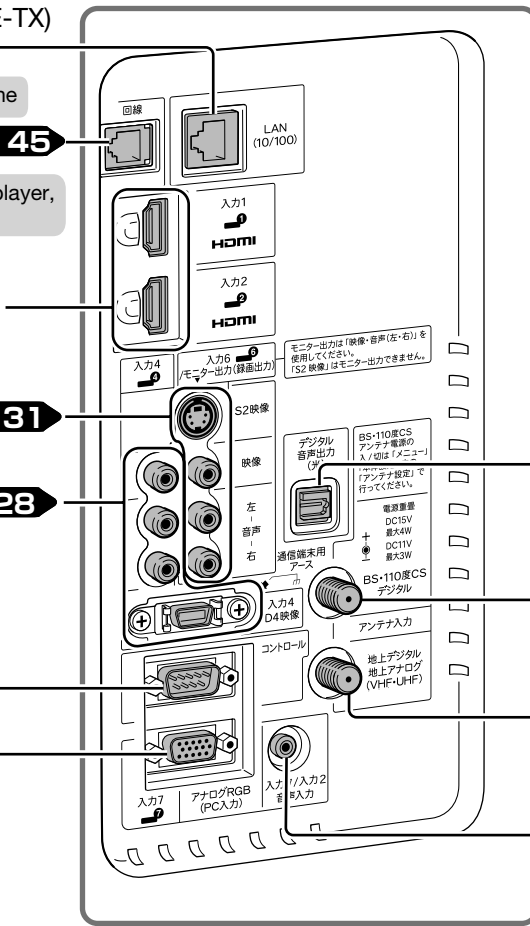

Connect the AC cord

AC cord connector
(AC 100V) **37**

The provided power
connector may have
different shape from that
shown in the drawing.

はじめに

準備

番組を見る

リモコンで
チャンネルや
音量などを
操作する

ファミリンク
で録画・再生

本機の機能の
活用

故障かな仕様・
寸法図など

English

Guide

Part Names - Remote Control Unit

Active/Standby **41**

Press to engage the TV set in the active or standby mode.

CATV

CATV **72**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

3桁入力

Digital channel number input **71**

Use to select a digital channel by entering the 3-digit channel number.

地上D Terrestrial digital select **68**

BS BS select **68**

CS CS select **68**

地上A Terrestrial analog select **68**

Select the CS digital channel for the first time. **47**

消音 Mute **69**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

+ 音量 - Volume up (+)/down (-) **69**

Press to adjust the volume.

Linked data broadcast **72・84**

Press to call the data broadcast linked with the current digital TV program.

AV mode select **89**

Press to select the picture/sound setting that best matches the current program.

番組表 EPG **74・76**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

裏番組 Other on-air programs **75**

Press to display the EPG for currently on-air programs only (裏番組).

番組情報

Program info **76・83**

Press to display detailed information on the current digital program.

Finish **42**

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

映像切換

Picture select **81**

Press to select the desired picture when watching a digital multi-picture program.

字幕

Caption **81**

Press to display, select, or turn off captions when watching a digital program with captions.

音声切換

Audio select **80・81**

Press to select the desired audio.

画面表示

Display **70**

Press to display or turn off the channel call, etc.

画面サイズ

Screen mode **87**

Press to select the desired screen mode.

静止

Freeze **82**

Press to freeze the picture.

お好みチャンネル

Favorite channel select/register **71**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Channel select **69**

- Press to select a channel.
- Use to input a number for various settings.

入力切替

Channel up (^)/down (v) **69**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

Input select **103**

Press to select the desired input.

Media select **68・72**

Press to select the desired media (TV or data).

Sleep timer **160**

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Menu **42**

Press to display or turn off the menu screen.

The menus can be displayed in English. See **187** for instructions on how to switch the display language.

Cursor (up, down, left, right) **42**

Use to select a menu item, column, etc.

決定 Enter/Confirm **42**

Press to confirm a selected setting or menu item.

Return **42**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.


青 赤 緑 黄

Color **76・77**

Use to operate EPGs and data program screens.


Familink **122・124~127**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

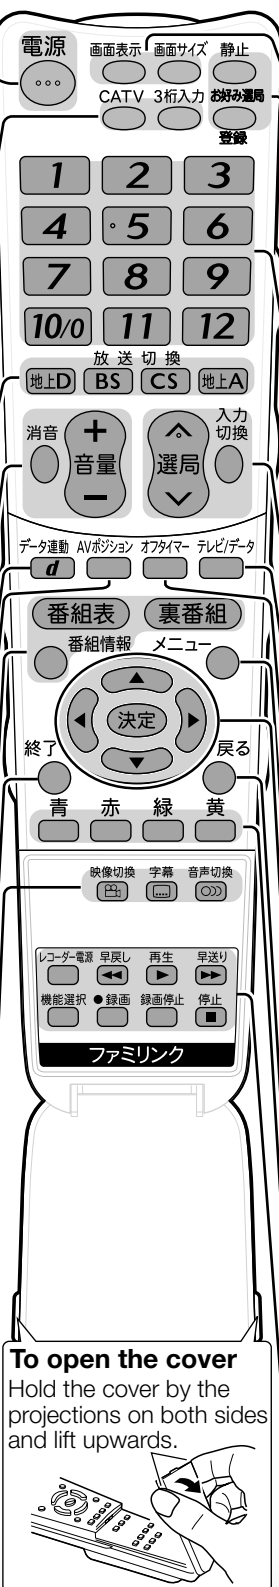

To open the cover


Hold the cover by the projections on both sides and lift upwards.

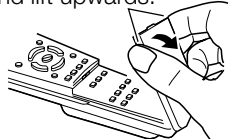

Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

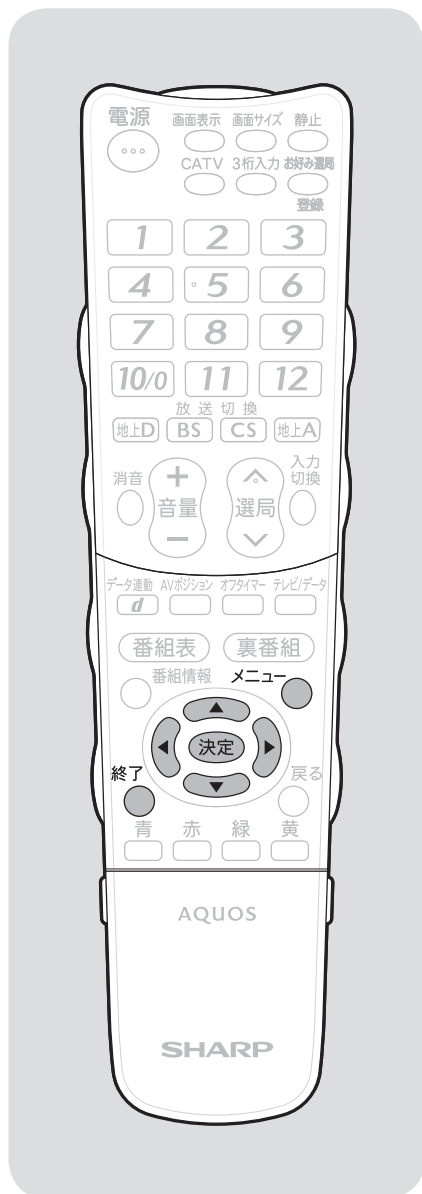

おしらせ

誤ってメニューを英語にしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Display the menu screen.

メニューを表示する

Press
メニュー

2

Select “本体設定” (Setup) –
“Language (言語設定)” and Enter.

「本体設定」－「Language (言語設定)」
を選ぶ



Press
決定

[本体設定 ... Language(言語設定)]

音声調整 省エネ設定 本体設定 機能切換

かんたん初期設定	
地域設定	
チャンネル設定	
アンテナ設定	
視聴環境設定 (音声)	
入カスリップ設定	
位置調整	
○ オートワイド	
映像反転	[しない]
クイック起動設定	[しない]
Language(言語設定)	[日本語]
時計設定	
リモコン番号設定	[リモコン番号1]
個人情報初期化	

3

Select “English” and Enter.

「English」を選ぶ



Press
決定



- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

4

Finish this operation.

終了する

Press
終了

はじめに

準備

番組を見る

リーダーや！
パソコンなど

ファミリンク
で録画・再生

本機の機能の
活用

故障かな仕様
寸法図など

English
Guide